 
 


Adding or Reloading Mitto's on Panels with LCD Display


The Control Panel Contains Live 230v Contacts That Could Cause Severe Harm or Fatal Injury If Touched

- ! Because of the presence of live contacts programming should be restricted to electrically trained and competent personnel
- ! Do not attempt this process in wet weather
- ! Only touch the 3 display control buttons.
- ! If you are in any doubt seek professional help.

The following sequence will add new, or reload existing Mitto transmitters to control panel receivers equipped with an LCD screen and three control buttons.

- Read the entire sequence through before attempting
- The process steps must be completed in rapid succession without pause
- If at any stage the panel displays  the process has failed.
- If you lose your way or become confused, simply leave the panel to time out (About 15 seconds) and start again.
- Do not at any time "CONFIRM" or "OK" 


Mitto 2 & 4 Button Transmitters – "Hidden Button Function"

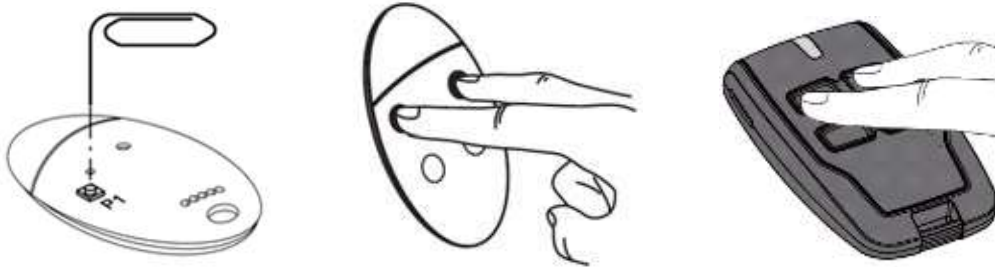

 
 
- Older Mitto's have a hidden button on the rear
- Newer Mitto's have no hidden button on the rear, this function is achieved by pressing the top 2 buttons together

Check and confirm which model of Mitto you are using before starting

 
 
LCD Screen Button Functions:

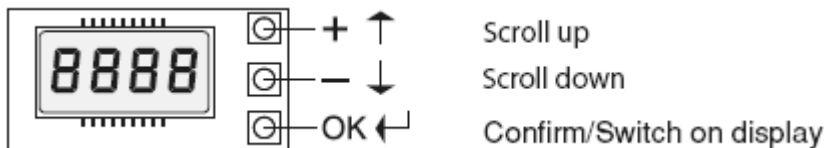

1. Press the OK button twice



2. Press the middle twice

 


 
Adding or Reloading Mitto's on Panels with LCD Display

3. Press the OK button once

 
= 
4. Press the **OK**  
= 

5. Press and hold the hidden button(s) on your transmitter -

 
- until the display shows  - release the hidden button(s)

= 

6. Press the button you wish to operate the gate/door with on your new transmitter

=  "01" relates to the number of transmitters installed on the system.

Subsequent transmitters will result in OK 02, OK 03 etc.

7. The display will now return to 

8. If more transmitters are to be added repeat from stage 4

9. If you are finished leave the panel to time out (About 15 sec.)

Your added transmitter(s) will not work until the receiver times out

If this fails to enable your new transmitter please seek the assistance of your local BFT recommended installer.